



REMOVE THE TWO LOCATING LEGS FROM THE BASE OF THE DISTRIBUTOR. THIS WILL AID YOU IN POSITIONING THE DISTRIBUTOR CORRECTLY. NOTE THE LOCATION OF THE LEADING EDGE OF THE ROTOR IN RELATION TO THE RAISED BOSS ON THE SIDE OF THE DISTRIBUTOR. YOU MAY NEED TO PURCHASE A DISTRIBUTOR HOLD DOWN AFTER THIS PROCEEDURE IF YOUR ENGINE DOES NOT HAVE ONE.